




# HTC Wizard 200 Receiver Replacement

Installation of the receiver on the HTC Wizard 200.

Written By: Kyle Champ

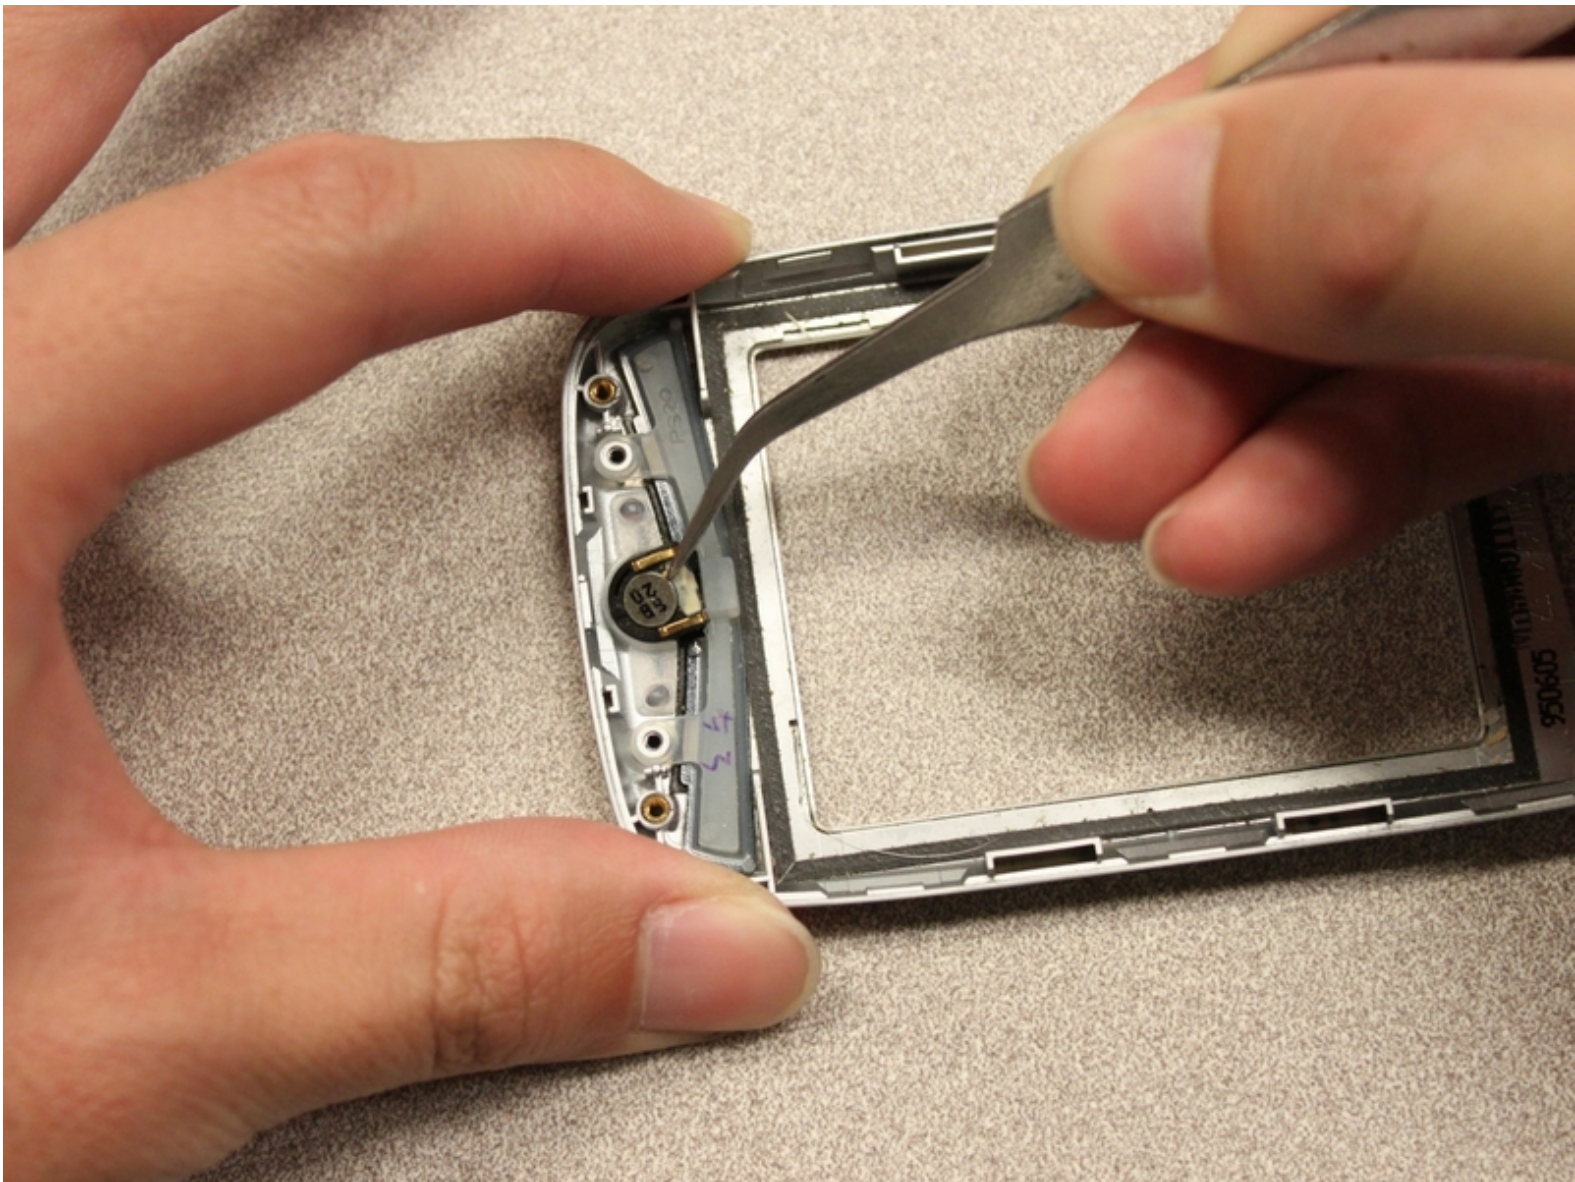

## INTRODUCTION

This guide will explain how to install / remove the receiver on the HTC Wizard 200.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-




## Step 1 — Battery



- Remove the back case with your fingernail to expose the battery. (Not shown in picture)
- Pull the black tab to remove the battery.

## Step 2 — Back Panel

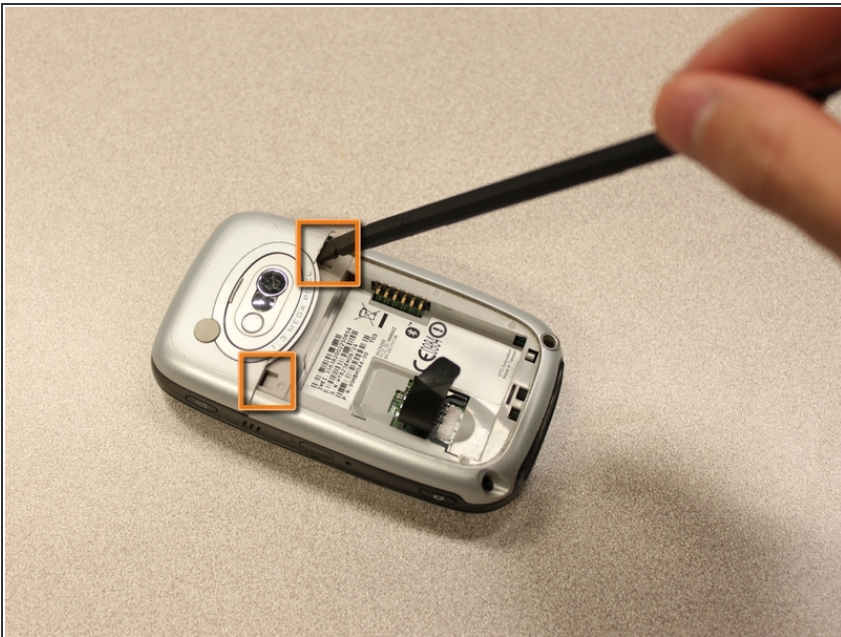

- Use a spudger to begin removal of the camera cover by inserting the flat end into the two notches and gently pry them up one at a time.




## Step 3



- Work the spudger around the edge of the camera cover to release the clips.

## Step 4

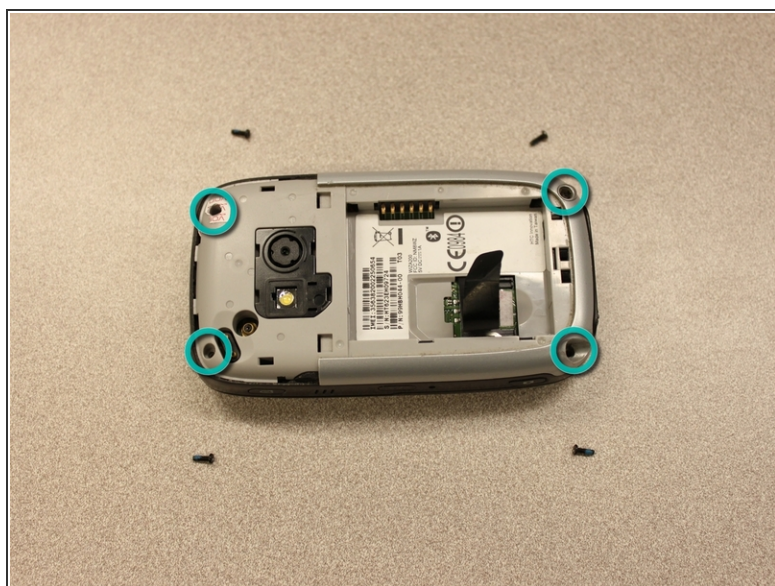

- Use a [T5 Torx screwdriver](#) to remove four 6mm screws that secure the back panel to the main body.

**i** There is a screw under the "void" sticker.




## Step 5



**i** Device rotated 180 degrees.


- Insert the flat end of a spudger into the crack between the front and rear cover.
- Once you have enough of a gap to fit a plastic opening tool into it, use the opening tool to release the clips.

## Step 6

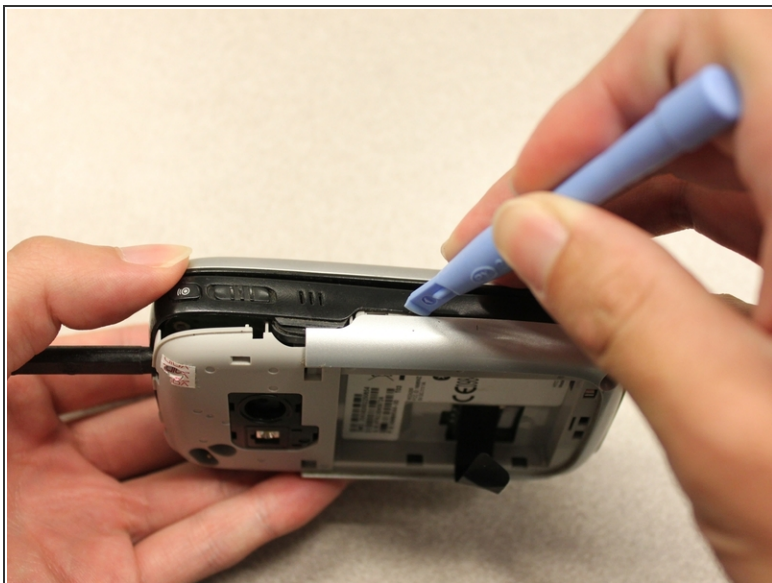

- Use the plastic opening tool to continue releasing the clips until you have worked your way around the edge.

## Step 7

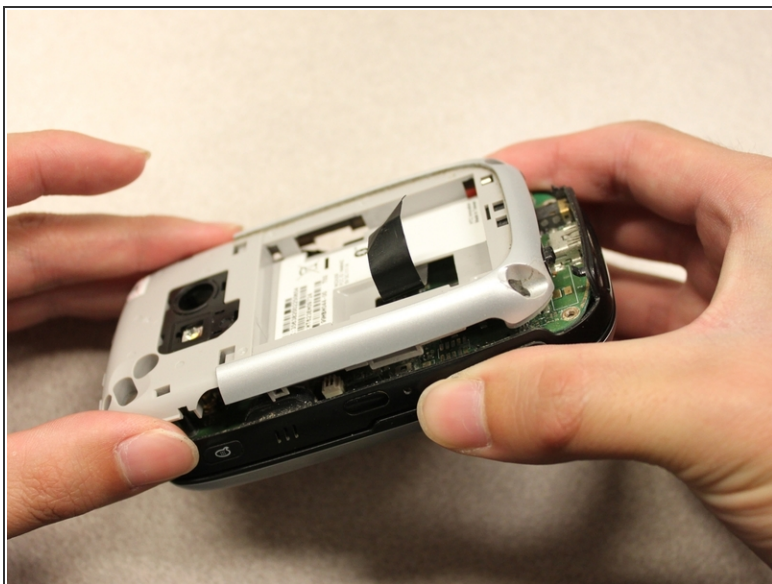

- Pull off the back case panel.






## Step 8 — Motherboard



- ⓘ Device rotated 180 degrees.
- Use the spudger to pry off the camera.

## Step 9

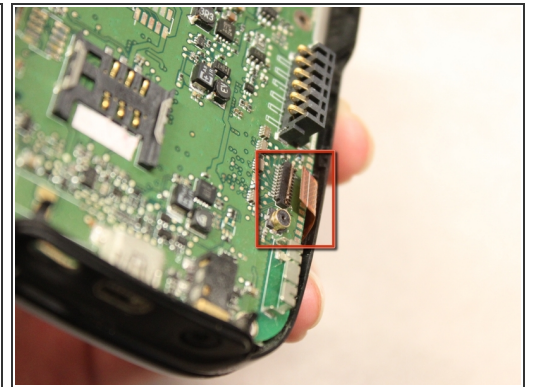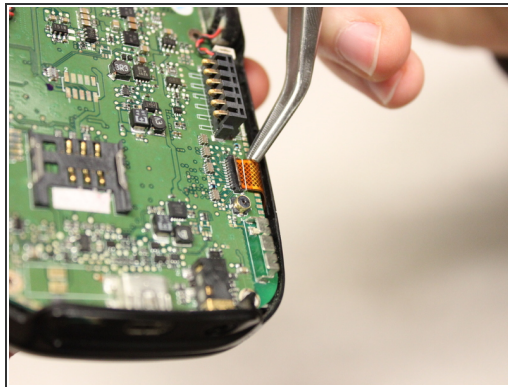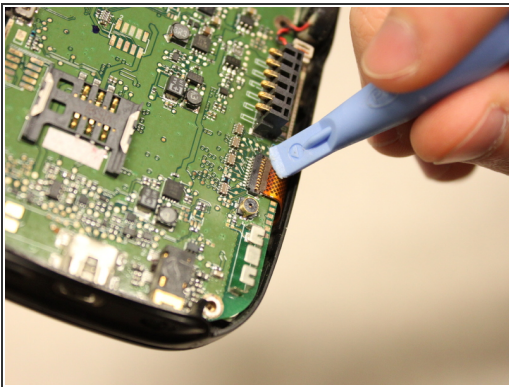

- ⓘ Device rotated 90 degrees CCW.
- ⓘ You may need to remove a strip of orange anti-static tape (not pictured).
- Flip up the connector latch.
- Use the tweezers to detach the flexible connection.

## Step 10



- ❗ Device rotated 90 degrees CW.
- Slide the screen slider into the open position.


## Step 11




- Use the spudger to push out the motherboard.




## Step 12

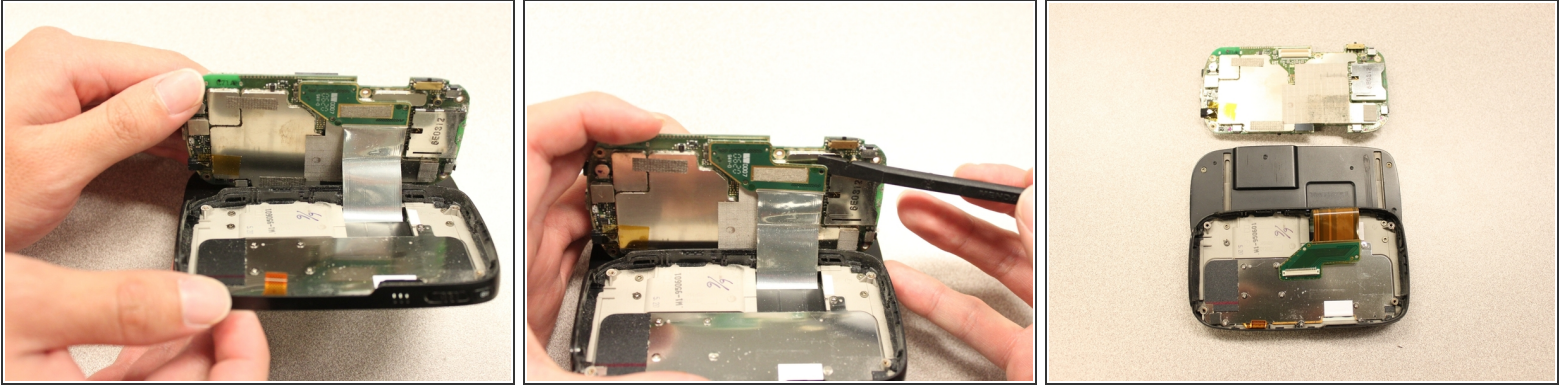


- Use your hands to gently expose the underside of the motherboard.
- Use the spudger to pull off the flexible connection.

 Be careful not to pull apart the motherboard connection quickly, as the connection and cables could be damaged.

## Step 13 — Keyboard Slider


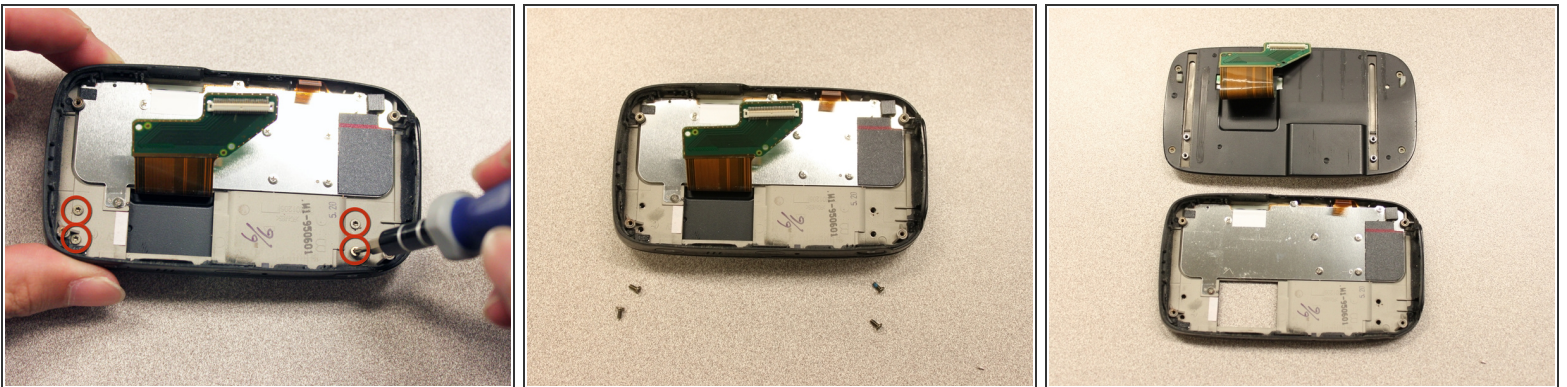


 Device rotated 180 degrees CW.

- Use the T5 Torx screwdriver to remove four 5mm screws that secure the keyboard slider to the main body.





## Step 14 — Screen Cover

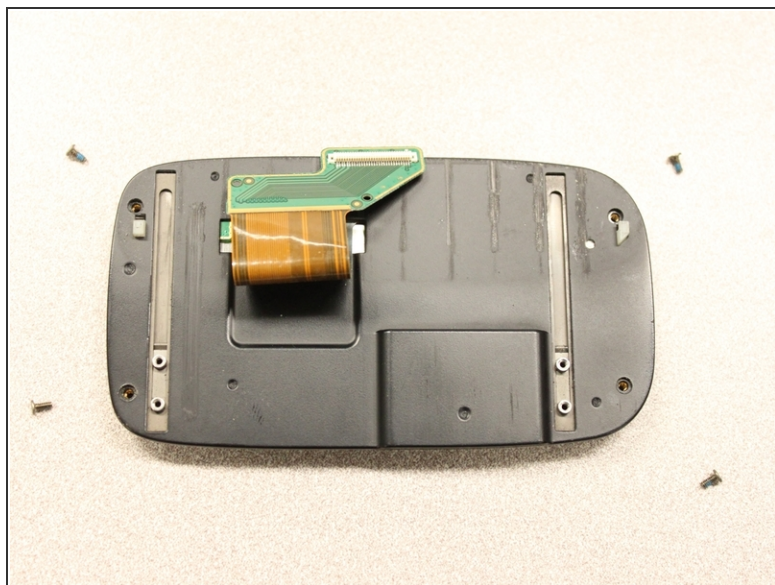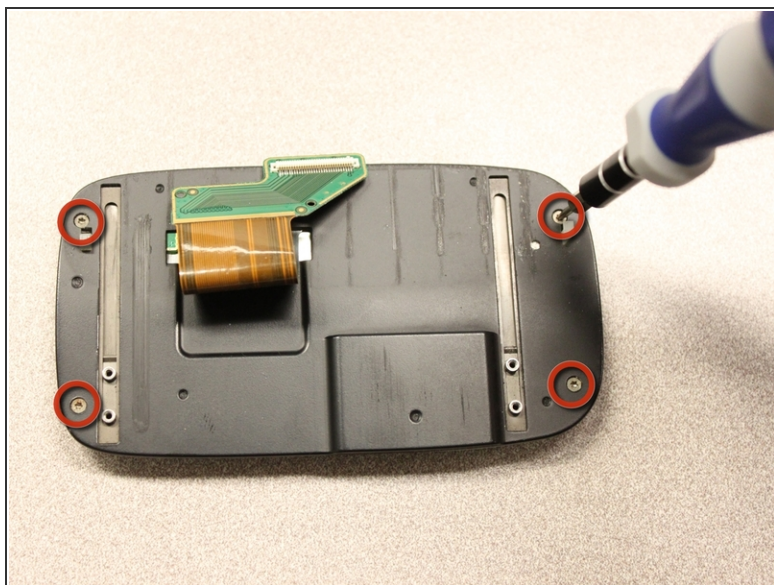

- Use the T5 Torx screwdriver to remove four 5mm screws that secure the back of the screen casing.


## Step 15

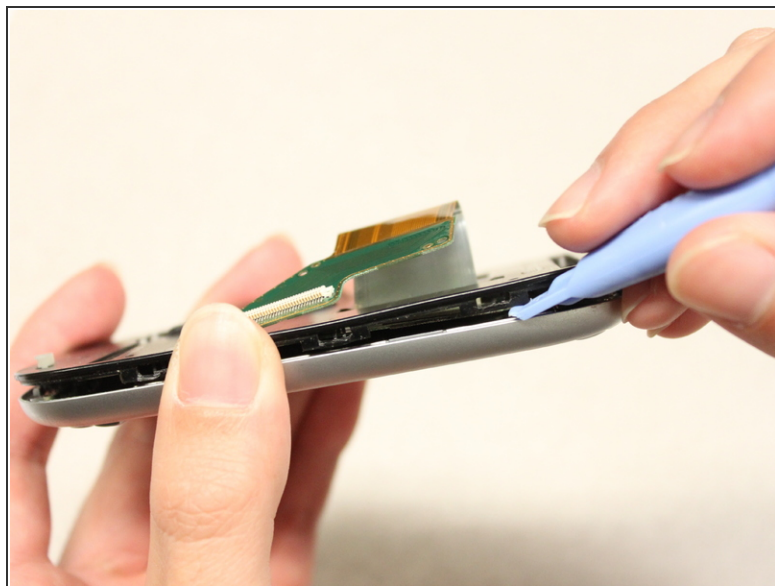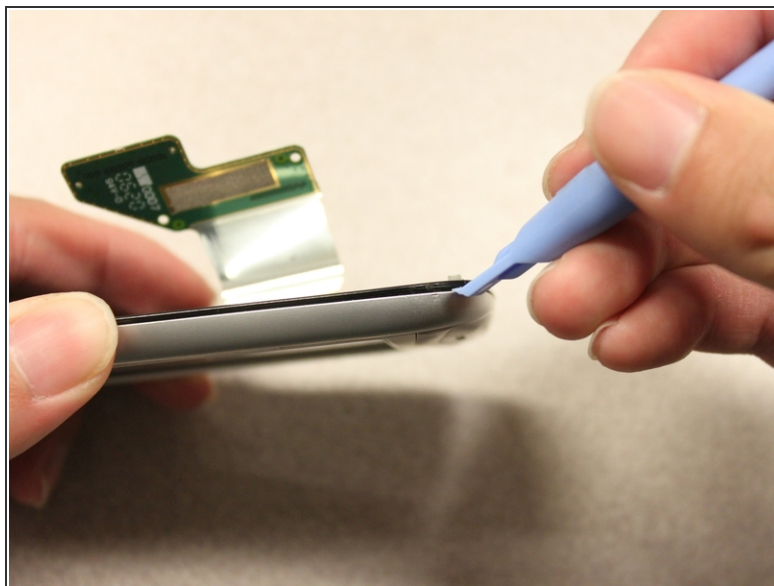

- Insert the plastic opening tool between the front panel and the rear panel and pry open to reach the screen.




## Step 16

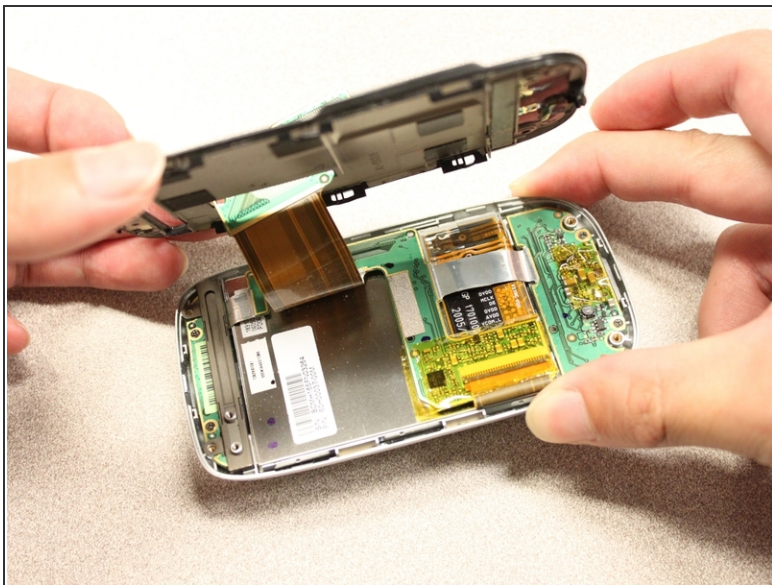

- Once the rear panel is loose, lift it off of the front panel.
- The flexible connection will pop loose.



## Step 17

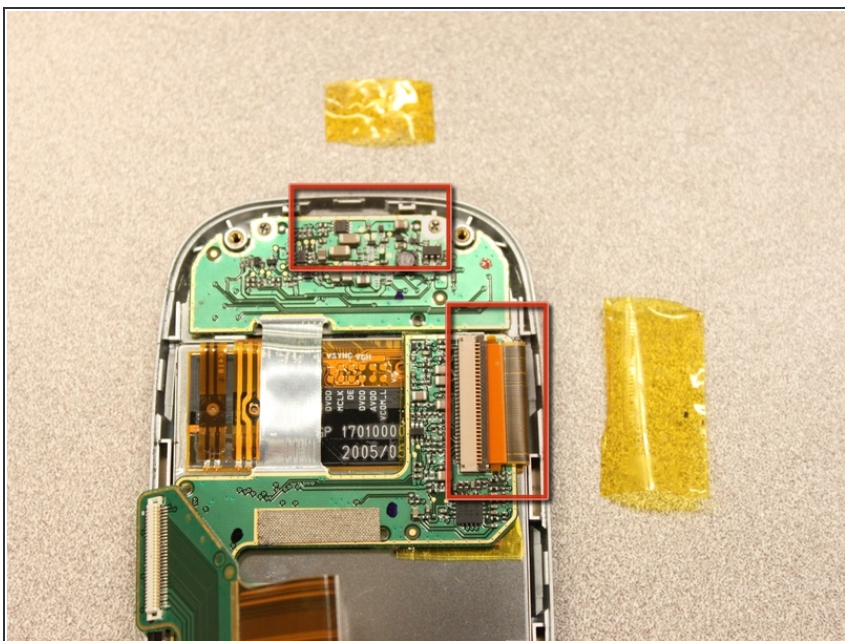

- ① Device rotated 90 degrees CCW.
- Remove the yellow anti-static tape.




## Step 18

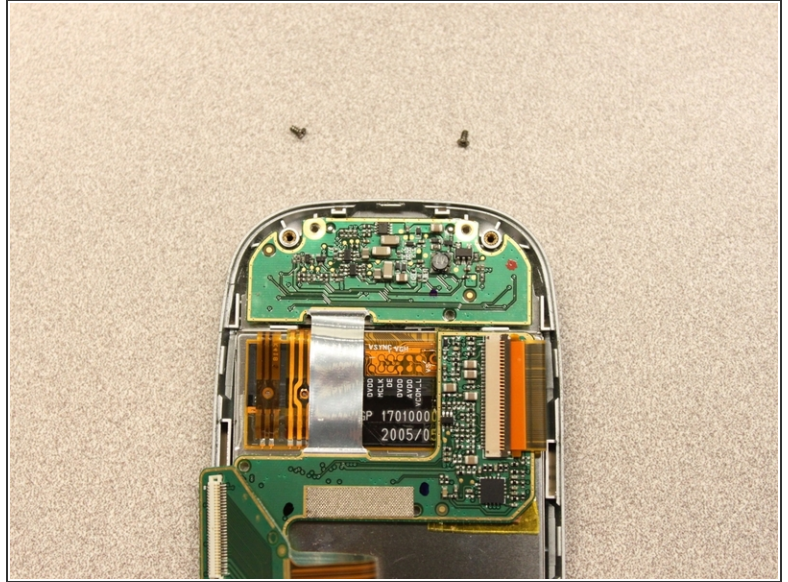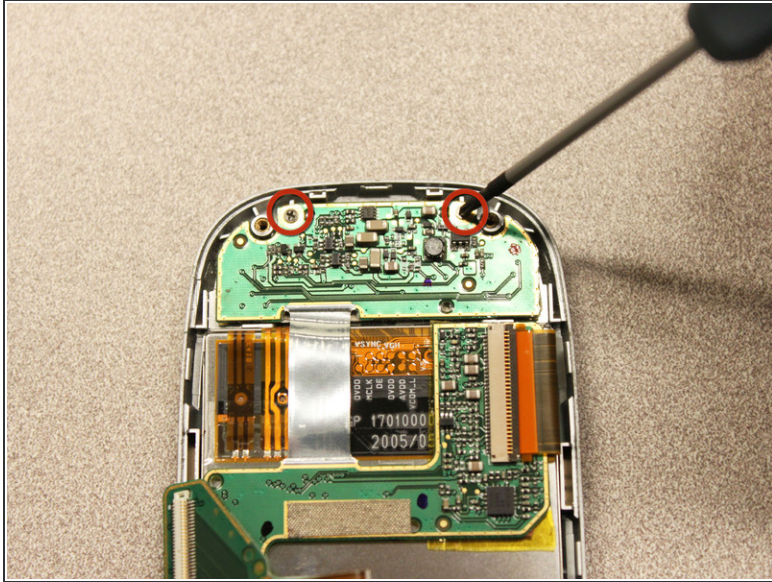

- Unscrew the two 3mm phillips #0 screws from the bottom of the device that secure the rigid flex board to the screen panel.

## Step 19

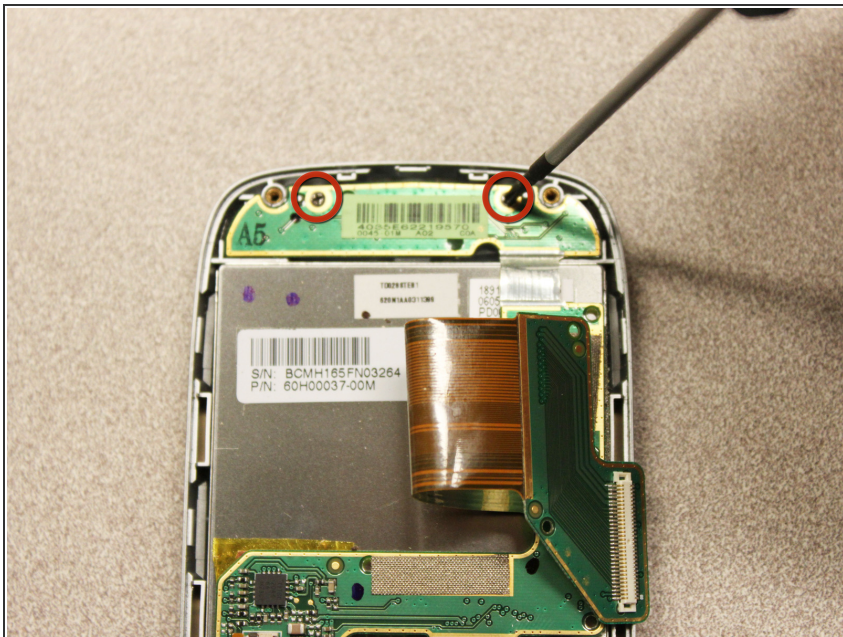


**i** Device rotated 180 degrees CW.

- Unscrew the two 3mm phillips #0 screws from the top of the device that secure the rigid flex board to the screen panel.




## Step 20

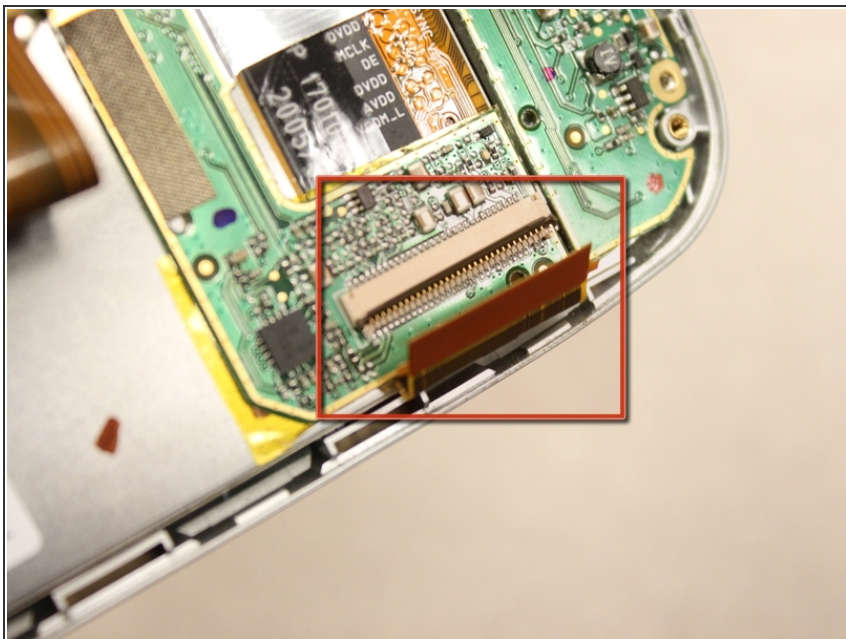

- ❗ Device rotated 90 degrees CCW.
- Unhinge the flexible connection and use the tweezers to disconnect.

## Step 21

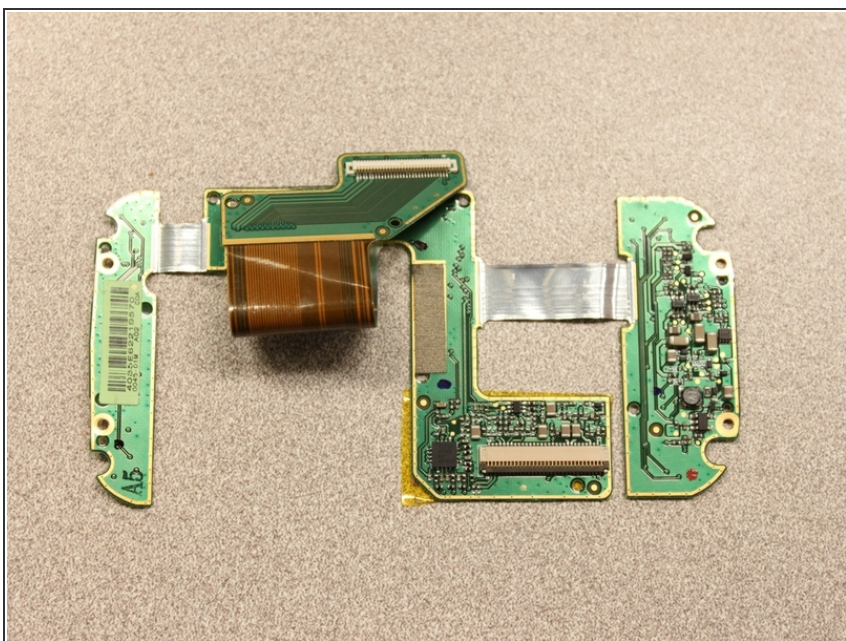

- Now that the rigid flex board is loose, remove it from the screen.



## Step 22 — LCD Screen



- Simply pull out the loose screen.

## Step 23 — Receiver



- Use the tweezers to take out the receiver.

To reassemble your device, follow these instructions in reverse order.



